



## ***INSTALLATION INSTRUCTIONS***

### ***36 INCH REFRIGERATOR***

*For Use With Models: EF36BNF, EF36LNF, EF36RNF, PF36BNDF*

**Francis - Voir Page 9**

**All specifications subject to change without notice  
Dacor assumes no liability for changes to specifications**


# TABLE OF CONTENTS

Refrigerator Safety .....	1	Installation Instructions .....	4-8
Installation Recommendations .....	1	Door and Drawer Front Removal.....	4
Design Specifications .....	2	Reinstalling the Drawer Front .....	5
Door Swing Dimensions .....	2	Reinstalling the Door(s) .....	5
Product Dimensions.....	2	Connecting the Water Supply .....	6
Installation Specifications .....	2-3	Plug in Refrigerator.....	6
Tools and Parts .....	2	Move Unit to Final Position.....	7
Location Requirements.....	3	Leveling.....	7
Cabinet Layout.....	3	Handle Installation .....	7
Water Supply Requirements .....	3	Properly Dispose of Your Old Refrigerator .....	7
Electrical Requirements.....	3	Installation Check List.....	8

## REFRIGERATOR SAFETY

### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

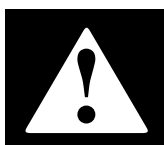

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

#### **DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

#### **WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

#### **WARNING**

##### **Suffocation Hazard**

**Remove the doors from your old refrigerator.**  
**Failure to do so can result in death or brain damage.**

#### **WARNING**

##### **Explosion Hazard**

**Keep flammable materials and vapors, such as gasoline, away from the refrigerator.**  
**Failure to do so can result in death, explosion, or fire.**

### IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons when using the refrigerator, follow basic precautions, including the following:

- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Disconnect power before servicing.
- Replace all parts and panels before operating.
- Use nonflammable cleaner.
- Keep flammable materials and vapors, such as gasoline, away from refrigerator.
- Use two or more people to move and install refrigerator.
- Disconnect power before installing ice maker (on ice maker kit ready models only).
- Remove doors from your old refrigerator.

### SAVE THESE INSTRUCTIONS

## INSTALLATION RECOMMENDATIONS

The importance of the installation of the Dacor refrigerator cannot be overemphasized. Installation should be done by a qualified installer.

Before you begin the installation process, it is recommended that you read these installation instructions completely. There are key details that you should take special care to observe during the installation process.

By reading these instructions carefully, you will make the installation process easier, problem-free and, most importantly, safe.

Any questions or problems with the installation should be directed to your Dacor dealer or the Dacor Customer Service Team at (800) 793-0093. You can also visit our web site at [www.Dacor.com](http://www.Dacor.com).

# DESIGN SPECIFICATIONS

## PRODUCT DIMENSIONS

- ◇ The depth from the front of the door (w/o door handles) to the back of the refrigerator chassis is 26 7/8" (683 mm).
- ◇ The depth of the cabinet less the door is 24 1/8" (613 mm).
- ◇ The power cord is 60" (1524 mm) long.
- ◇ The height from the top of the refrigerator to the floor with the leveling legs in the down position is 70 1/8" (1781 mm)
- ◇ The height from the top of the refrigerator to the floor with the leveling legs in the fully extended position is 71 1/4" (1810 mm) at the front of the unit and 70 11/16" (1796 mm) at the rear of the unit.
- ◇ The refrigerator width from edge to edge is 35 5/8" (905 mm).

## DOOR SWING DIMENSIONS

The area to the left and the right of the appliance must permit both doors to open to a minimum of 90°. Allow a minimum of 2 1/2" (64 mm) space between the side of the refrigerator doors and a corner wall.

# INSTALLATION SPECIFICATIONS

## TOOLS AND PARTS

### IMPORTANT:

- ◇ **Installer:** Leave these installation instructions with the homeowner.
- ◇ **Homeowner:** Keep these installation instructions for future reference. Save these installation instructions for the local electrical inspector's use.

### Tools needed:

Make sure that you have the necessary tools and materials available for a proper installation.

- ◇ Phillips screwdriver set
- ◇ Slotted screwdriver set
- ◇ Torx drive screwdriver set
- ◇ Provide sufficient length 8' (2.4 m) to allow for a minimum of a 24" (610 mm) diameter service loop of 1/4" (6 mm) copper tubing for the water line.
- ◇ Copper tubing cutter
- ◇ Level - 2' (.6 m) and 4' (1.2 m) recommended
- ◇ Appliance dolly able to support 700 lbs (317 kg) and adequate manpower to handle the weight of the appliance
- ◇ Various sized pliers
- ◇ Allen wrench set
- ◇ 3/8" hex bolt nut driver or socket set
- ◇ Crescent wrenches
- ◇ Cordless drill and assorted drill bits
- ◇ Masonite, plywood, 1/8" pressed fiberboard, cardboard or other suitable material to protect finished flooring
- ◇ Appropriate materials to cover and protect the home and its furnishings during installation

## LOCATION REQUIREMENTS

Your Dacor refrigerator can be recessed in an opening between cabinets or installed at the end of a cabinet run using a side panel to enclose the refrigerator.

### ⚠ WARNING



#### Explosion Hazard

**Keep flammable material and vapors, such as gasoline, away from the refrigerator.**

**Failure to do so can result in death, explosion, or fire.**

### IMPORTANT:

- ◇ Observe all governing codes and ordinances.
- ◇ To ensure proper ventilation for your refrigerator, allow for a 1/2" (1.25 mm) space at the top and behind the refrigerator.
- ◇ Do not install the refrigerator near an oven, radiator or other heat source, nor in a location where the temperature will fall below 55°F (13°C).
- ◇ Allow a minimum of 2 1/2" (64 mm) space between the side of the refrigerator and an oven or range.
- ◇ The floor must be able to support the refrigerator's weight of more than 600 lbs (272 kg), the door panels and the contents of the refrigerator.
- ◇ The ceiling height must allow for side tipping radius.
- ◇ The location should permit doors to open fully.

### ⚠ WARNING

#### Excessive Weight Hazard


**Use two or more people to move and install the refrigerator.**

**Failure to do so can result in back or other injury.**

# INSTALLATION SPECIFICATIONS

## CABINET LAYOUT

- ◇ A grounded three prong non-GFCI electrical outlet must be provided and should be in a location that allows the refrigerator to be connected without an extension cord. See "Electrical Requirements" for additional information.
- ◇ The plumbing for the water line can come through the floor flush to or from the back wall. Install the water valve in a location that allows it to be turned off without moving the refrigerator out in the event the refrigerator or water line requires service.
- ◇ For model IF36, see document 100504 for instructions on planning and installing integrated front panels. It is available at [www.Dacor.com](http://www.Dacor.com).

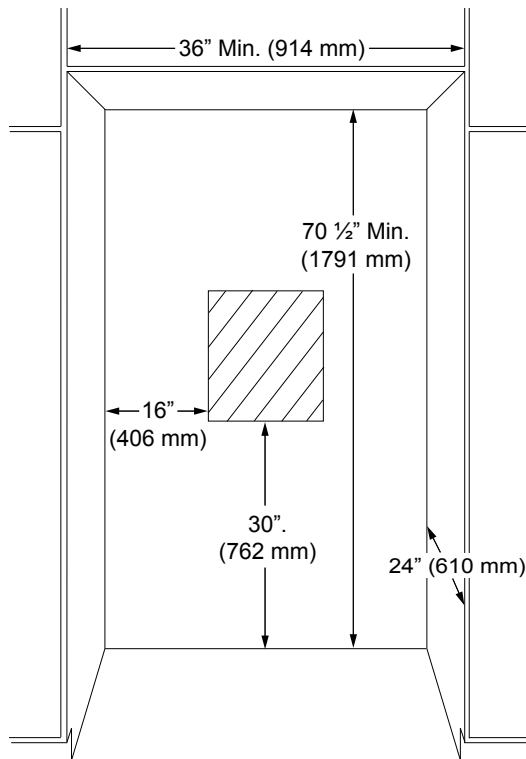

**WATER VALVE LOCATION -  
APPROXIMATE DIMENSIONS**

## WATER SUPPLY REQUIREMENTS

- ◇ All installations must meet local plumbing code requirements.
- ◇ Use 1/4" (6 mm) copper line to connect the refrigerator to the house cold fresh water supply.
- ◇ Install a shut off valve between the refrigerator and water supply. The shut off valve should be a drilled saddle valve. See the diagram above for recommended location.
- ◇ Do not use a piecing type or 3/16" (4.76 mm) saddle valve which will reduce water flow and clog more easily.
- ◇ Allow a minimum of 24" (610 mm) diameter service loop of copper tubing outside the wall or floor for easy connection to the water supply.

### Cold water supply

Connect the ice maker to a cold water line with water pressure between 35 and 120 psi. If you have any questions about your water pressure, call your utility company.

### Reverse osmosis water supply

**IMPORTANT:** The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).


If the water pressure to the reverse osmosis system is less than 40 to 60 psi (276 to 414 kPa):

- Check to see whether the sediment filter in the reverse osmosis system is blocked. Replace the filter if necessary.
- Allow the storage tank on the reverse osmosis system to refill after heavy usage.
- If your refrigerator has a water filter, it may further reduce the water pressure when used in conjunction with a reverse osmosis system. Remove the water filter. See "Water Filtration System."

If you have questions about your water pressure, call a licensed, qualified plumber.

## ELECTRICAL REQUIREMENTS

A 115 Volt, 60 Hz. AC only 15 or 20 amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

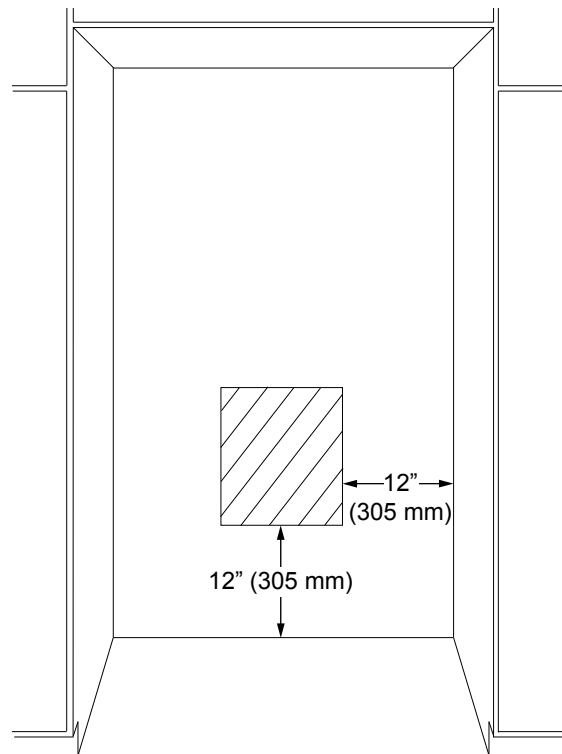

**ELECTRICAL LOCATION - APPROXIMATE DIMENSIONS**

# INSTALLATION INSTRUCTIONS

**IMPORTANT:** If you receive a damaged product, immediately contact your dealer or builder. Do not install or use a damaged appliance.

## DOOR AND DRAWER FRONT REMOVAL

Some installations require door and drawer front removal before transporting the refrigerator through doorways to the location where it will be used.

### ⚠ WARNING



#### Electric Shock Hazard


**Disconnect power before removing doors.**

**Failure to do so can result in death or electrical shock.**

### TO REMOVE THE DOOR:

1. Unplug the power cord from the power source.


2. Remove the toe grille.

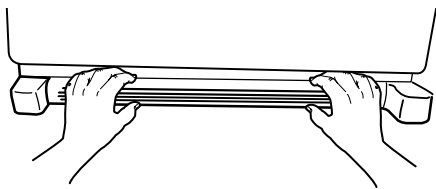


3. Remove the top hinge cover from the refrigerator door by removing the Phillips screw. Retain the screw and cover for later use.

Hinge Cover


4. Unscrew the 5/16" hex head screws from the top hinge. Remove the hinge and retain it and all screws for later use.

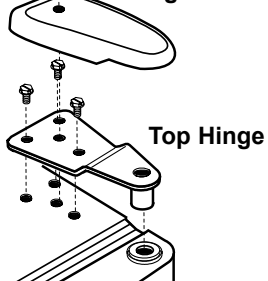

5. On 3 door (french door) models, disconnect the wiring plug located on top of the left top hinge by wedging a flat-blade screwdriver between the two sections.

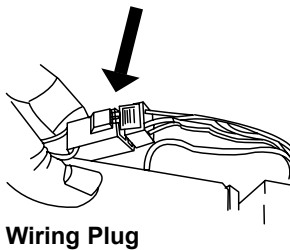


6. Lift the refrigerator door(s) from center hinge pin.

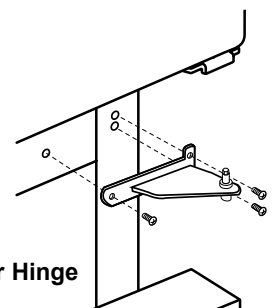

7. Remove the Phillips screws that hold the center hinge in place. Remove the hinge and retain it and all screws for later use.

### TO REMOVE THE DRAWER FRONT:


1. Pull the freezer drawer completely open.
2. Tilt the lower basket forward and lift to remove.

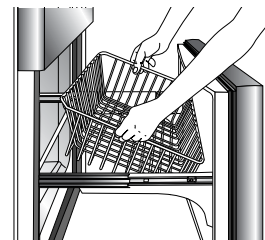


3. Loosen the four (4) screws attaching the drawer brackets to the drawer front as shown below.

**NOTE:** Loosen the screws only three to four turns. Do not remove the screws from the drawer front.

Loosen screws on both sides of the drawer front.

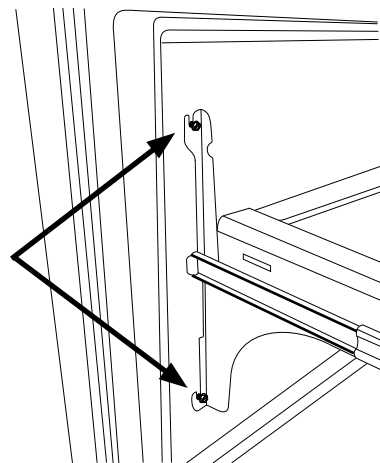

4. Lift the drawer front upward and off the screws.

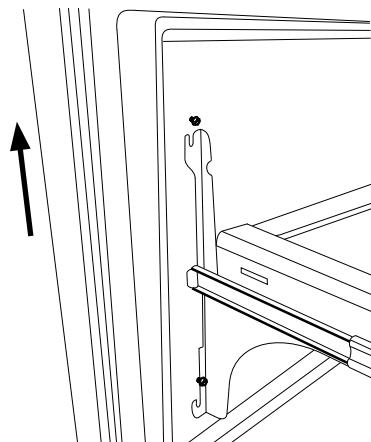


# INSTALLATION INSTRUCTIONS


## REINSTALLING THE DRAWER FRONT

After the moving the refrigerator to the location where it will be used, reinstall the door(s) and freezer drawer front.

1. Slide the screws on the back of the drawer front into the slots in the drawer brackets on both sides. You may need to move the bottom of the bracket around slightly to get the slot to line up with the screw.

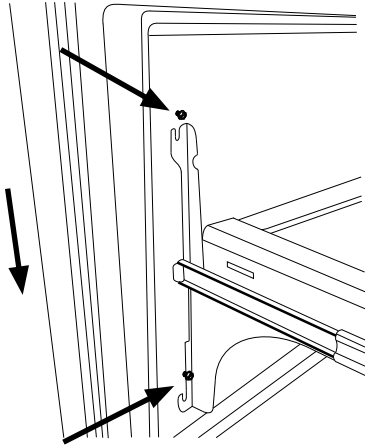



2. Tighten the four front panel screws completely. Do not over-tighten.
3. Place the freezer basket back onto the drawer slides.

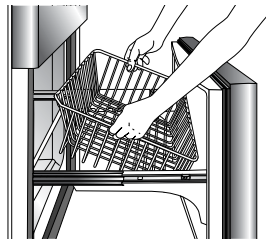


## REINSTALLING THE DOOR(S)

Install the hinge assemblies:


1. Install the top hinge loosely using the existing 5/16" hex head screws.
2. Install the center hinge using the existing Phillips screws.

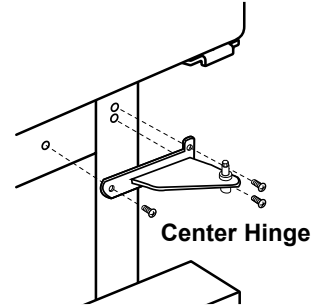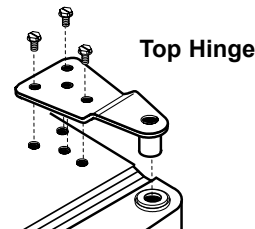


3. Place the hinge side of the refrigerator door on the center hinge pin.
4. While holding the refrigerator door upright, tighten down the top hinge with a 5/16" hex head driver.

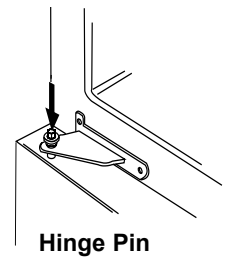

5. On 3 door (french door) models, reconnect the wiring plug located on top of the left top hinge.

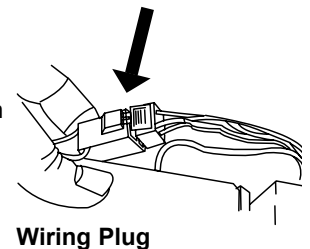

6. Replace the hinge cover using the existing Phillips screw.

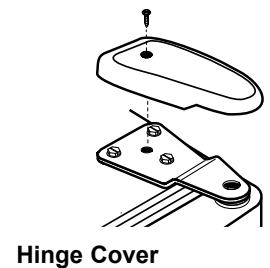

# INSTALLATION INSTRUCTIONS


## CONNECTING THE WATER SUPPLY

### Materials Needed:


- 1/4" outer diameter flexible copper tubing
- Shut-off valve (requires a 1/4" hole to be drilled into water supply line before valve attachment)
- Adjustable wrench
- 1/4" hex nut driver

1. Unplug the refrigerator from the electrical outlet.


2. Create service loop with copper tubing (minimum 2' diameter). Avoid kinks in the copper tubing when bending it into a service loop. Do not use plastic tubing.

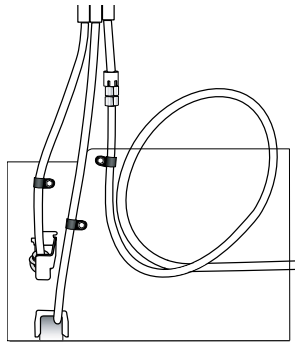


3. Remove the plastic cap from water valve inlet port.

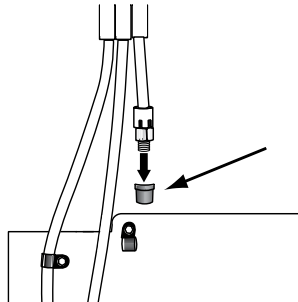

4. Place the brass nut (A) and sleeve (B) on the end of the copper tube as illustrated.  
**Reminder:** Do not use an old sleeve. The nut and sleeve are provided in the use and care packet.

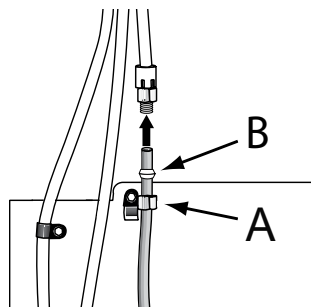

5. Place the end of the copper tubing into the water valve inlet port. Shape the tubing slightly. Do not kink the tubing so that it feeds straight into the inlet port.

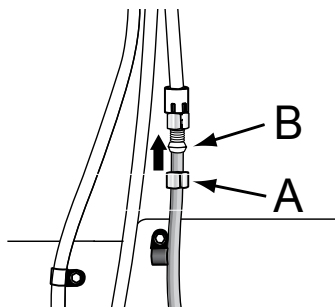


6. Slide the brass nut over the sleeve and screw it into the inlet port.

7. Place an adjustable wrench on the nut (1) attached to the plastic waterline. Maintain position.

8. Using a second adjustable wrench, turn the lower nut (2) counterclockwise and fully tighten it while holding the upper nut in place. Do not overtighten.

9. Pull on the tubing to confirm the connection is secure. Connect the tubing to the frame with the water tubing clamp (C).

10. Turn on the water supply. Check for leaks and correct if necessary. Continue to observe the water supply connection for two to three hours prior to moving the refrigerator to its permanent location. Monitor the water connection for 24 hours. Correct leaks if necessary.

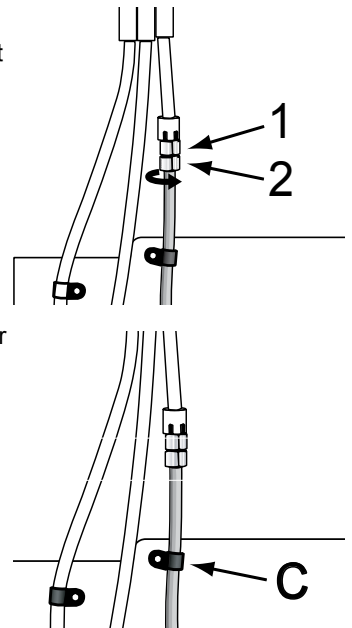

## PLUG IN REFRIGERATOR

### ⚠ WARNING



#### Electric Shock Hazard

**Plug the refrigerator into a grounded 3-prong outlet.**

**Do not remove ground prong.**


**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

Plug the refrigerator into a grounded three prong outlet.

**NOTE:** Allow 24 hours to produce the first batch of ice. Discard the first three batches of ice produced. Allow three days to completely fill the ice container.

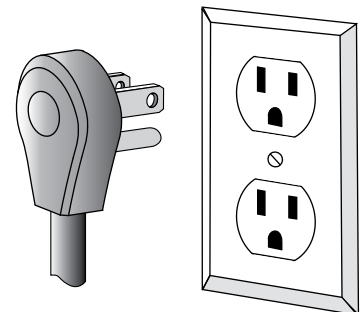



# INSTALLATION INSTRUCTIONS


## MOVE UNIT TO FINAL POSITION

### When Moving Your Refrigerator:

Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure to protect the floor. Always pull the refrigerator straight out when moving it. Do not wiggle or “walk” the refrigerator when trying to move it. Floor damage could occur.

## LEVELING

1. Remove the base grille. Grasp the grille firmly and pull it toward you.

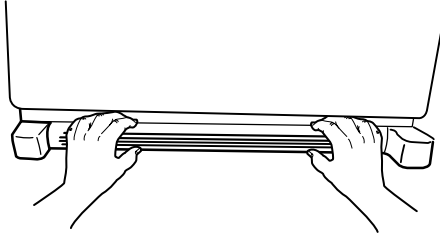


2. Using a 1/4" hex driver, turn the leveling screw on each side to raise or lower that side of the refrigerator.

### NOTE

Having someone push against the top of the refrigerator takes some weight off the adjustment screws and rollers. Doing so makes it easier to turn the screws.

- To raise, turn the adjustment screw clockwise.
  - To lower, turn the adjustment screw counter-clockwise.
3. Open the door again to make sure that it closes as easily as you like. If not, tilt the refrigerator slightly more to the rear by turning both adjustments screws clockwise. It may take several more turns, and you should turn both adjustment screws the same amount.

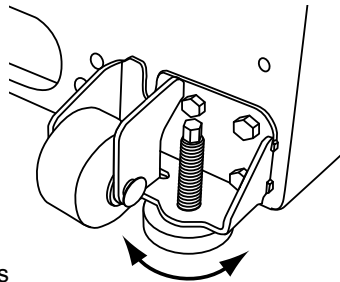

4. Replace the base grill.

## HANDLE INSTALLATION

- Some units do not come with the handle installed to allow the customer to choose the handle style. Optional handle kits are also available for other models that come with the handle already installed. See the use and care manual for a list of available handle kits.
- The installation instructions for the handle are included with the kit.

## PROPERLY DISPOSE OF YOUR OLD REFRIGERATOR

### ⚠ WARNING

#### Suffocation Hazard


Remove doors from your old refrigerator.

Failure to do so can result in death or brain damage.

**IMPORTANT:** Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous even if they sit out for “just a few days.” If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

### Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so children may not easily climb inside.

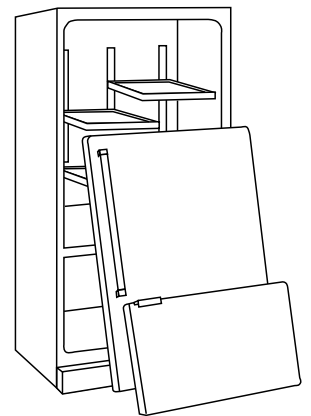

# INSTALLATION INSTRUCTIONS

## INSTALLATION CHECKLIST

The importance of the proper installation of your Dacor refrigerator cannot be overemphasized. Proper installation is the responsibility of the homeowner.

**IMPORTANT:** To ensure a safe and proper installation, the following checklist should be completed by the installer to ensure that no part of the installation has been overlooked.

Any questions or problems with this installation should be directed to your Dacor dealer or the Dacor Customer Service Team at (800) 793-0093 or email [customerservice@Dacor.com](mailto:customerservice@Dacor.com). You may also visit our web site at [www.Dacor.com](http://www.Dacor.com).

- ☐ Are all the leveling legs extended down to make contact with the floor? Is the unit level?
- ☐ Is the power cord plugged into a properly grounded dedicated three prong, grounded outlet, which had been installed in accordance with all applicable electrical codes?
- ☐ Is the water supply connected? Have you checked for leaks?
- ☐ Has the base grill been installed properly?
- ☐ Has the old refrigerator been disposed of safely and properly?
- ☐ Have any problems been noted on the warranty card or during the on-line activation? Has the warranty been activated online or has the warranty card been filled out and mailed?

If you need service, be sure to have the model and serial numbers when you call. You'll find these numbers on the serial number plate, located on the right hand side of the fresh food compartment.

Contact a Dacor authorized service representative, a Dacor dealer, or the Dacor Customer Service Team at (800) 793-0093.